

---

**SOUNDTRACS<sup>PLC</sup>**



# Operation Manual

Issue F

---

V 2+



---

## Copyright © 1998, 1999, 2001 Soundtracs PLC

### All rights reserved.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the written permission of Soundtracs PLC. Information in this manual is subject to change without notice, and does not represent a commitment on the part of the vendor. Soundtracs PLC shall not be liable for any loss or damage whatsoever arising from the use of information or any error contained in this manual.

All repair and service of the Virtua product should be undertaken by Soundtracs PLC or its authorised agents. Soundtracs PLC cannot accept any liability whatsoever for any loss or damage caused by service, maintenance, or repair by unauthorised personnel.

### Software License Notice

Your license agreement with Soundtracs PLC, which is included with the Virtua product, specifies the permitted and prohibited uses of the product. Any unauthorised duplication or use of Soundtracs software, in whole or in part, in print or in any other storage and retrieval system is prohibited.

### Licenses and Trademarks

The DPC II logo and DPC II name are trademarks, and Soundtracs and the Soundtracs logo are registered trademarks of Soundtracs PLC. Microsoft and MS-DOS are registered trademarks and Windows is a trademark of Microsoft Corp.

The software license for the DPC II operating system is included in the cost of the console, and is NON-TRANSFERABLE. If the system is re-sold or moved from the original country of sale, it will be necessary to pay an additional license fee.

Soundtracs PLC  
The Clock House  
4 Dorking Road  
Epsom  
Surrey  
KT18 7LX  
England  
Telephone: +44 (0)1372 845600  
Fax: +44 (0)1372 845656  
Email: sales@soundtracs.com  
WWW: <http://www.soundtracs.com>

Manual Issue and Date: Issue F, Feb 2001



# Licence Agreement

"Product": DPC II software product produced by Soundtracs intended for use on Target Platform identified below.

"Target Platform": Soundtracs DPC II Digital Console system.

In return for the payment of the one-time fee, the Customer (identified at the end of this Agreement) receives from Soundtracs a licence to use the Product subject to the following terms and conditions.

 
1. The Product may be used without time limit by the Customer on the Target Platform.
2. The Customer must register the Product with Soundtracs. Registering the Product is deemed an acceptance of the terms and conditions in this agreement.
3. The Product and its licence are not transferable, and the Customer is not permitted to onward-license to any third party. The Customer indemnifies Soundtracs against any and all claims and actions arising from third party use of copies of the Product made by the Customer.
4. The Customer agrees not to attempt to decompile the object code of the Product otherwise than in circumstances specifically provided for by law, and then only after consultation with Soundtracs.
5. The Customer agrees not to use, or licence the Product for use, with equipment other than the Target Platform.
6. The Customer agrees not to modify the Product without the prior written consent of Soundtracs.
7. This Agreement applies to any enhancement or upgrades that may become available for the Product.
8. This Agreement does not transfer any right, title, or interest in the Product to Customer except as specifically set forth herein.
9. Soundtracs reserves the right to terminate this Agreement upon breach, in which event Customer shall thereafter only be authorised to use the Product to the extent that its contractual commitments to third parties require and then only where such commitments relate to use of the Product as authorised in the foregoing provisions of the Agreement.

**LIMITED WARRANTY** - Soundtracs warrants for a period of 1 year from the date of purchase of the Product, the Product will reasonably execute its programming instructions when properly installed on the Target Platform. In the event that this Product fails to execute its programming instructions during the warranty period, the Customer's remedy shall be to return the Product to Soundtracs for replacement or repair at Soundtracs option. Soundtracs makes no other express warranty, whether written or oral with respect of this Product.

**LIMITATION OF LIABILITY** - Except as otherwise expressly provided by law, (a) the remedies provided above are the Customer's sole and exclusive remedies and (b) Soundtracs shall not be liable for any direct, indirect, special, incidental, or consequential damages (including lost profit whether based on warranty, contract, tort, or any other legal theory.)

This agreement is made under the Laws of England.

LICENCE NO:



# WINDOWS & DOS USER LICENSE AGREEMENT

IMPORTANT - READ CAREFULLY BEFORE USING EMBEDDED SYSTEM WHICH CONTAINS MICROSOFT SOFTWARE. By using embedded system software, you indicate your acceptance of the following Software License Agreement.

## SOFTWARE LICENSE AGREEMENT (Embedded Products)

This software license agreement, including the Warranty and Special Provisions set forth in the appendix or separate booklet included in this package, is a legal agreement between you (either an individual or an entity, hereinafter "End User") and Soundtracs plc ("Embedded System Manufacturer") of the embedded system containing software product. By using the embedded system on which software program(s) have been preinstalled ("SOFTWARE"), you are agreeing to be bound by the terms of this agreement.

1. **GRANT OF LICENSE.** This License Agreement permits you to use the Microsoft SOFTWARE as preinstalled on the embedded system.
2. **INTELLECTUAL PROPERTY.** Virtua contains intellectual property, i.e. software programs, that is licensed for the end user customer's use (hereinafter "End User"). This is not a sale of such intellectual property. The End User shall not copy, disassemble, reverse engineer, or decompile the software program.
3. **COPYRIGHT.** The SOFTWARE is owned by Microsoft Corporation or its suppliers and is protected by United States copyright laws and international treaty provisions and all other applicable national laws. Therefore, you must treat the SOFTWARE like any other copyrighted material (e.g. a book or musical recording).
4. **U.S. GOVERNMENT RESTRICTED RIGHTS.** The SOFTWARE and documentation are provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the United States Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of The Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or subparagraphs (c)(1) and (2) of the Commercial Computer Software - Restricted Rights at 48 CFR 52.227-19, as applicable. Manufacturer is Microsoft Corporation, One Microsoft Way, Redmond, WA 98052-6399.

Please see the Warranty for information concerning governing law.

Product support for the SOFTWARE is not provided by Microsoft Corporation or its subsidiaries. For product support, please refer to Embedded System Manufacturer's support number provided in the documentation for the embedded system. Should you have any questions concerning this Agreement, or if you desire to contact Embedded System Manufacturer for any other reason, please refer to the address provided in the documentation for your embedded system.

For the limited warranty and special provisions pertaining to your Country, please refer to embedded system documentation or the warranty and special provisions booklet included in this package.

## APPENDIX: WARRANTY AND SPECIAL PROVISIONS

**LIMITED WARRANTY.** Embedded System Manufacturer warrants that (a) the SOFTWARE will perform substantially in accordance with the accompanying written materials for a period of ninety (90) days from the date of receipt. Any implied warranties on the SOFTWARE are limited to ninety (90) days. Some states/jurisdictions do not allow limitations on duration of an implied warranty, so the above limitation may not apply to you.

**CUSTOMER REMEDIES.** Embedded System Manufacturer's and its suppliers' entire liability and your exclusive remedy shall be, at Embedded System Manufacturer's option, either (a) return of the price paid, or (b) repair or replacement of the SOFTWARE that does not meet the above Limited Warranty and which is returned to Embedded System Manufacturer with a copy of your receipt. This Limited Warranty is void if failure of the SOFTWARE has resulted from accident, abuse or misapplication. Any replacement SOFTWARE will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer.

**NO OTHER WARRANTIES.** The Microsoft Software Programs are provided to the end user "as is" without warranty of any kind, either expressed or implied, including, but not limited to, warranties of merchantability and fitness for a particular purpose. The entire risk of the quality and performance of the software program is with you.

**NO LIABILITY FOR CONSEQUENTIAL DAMAGES.** Embedded manufacturer's suppliers shall not be held to any liability for any damages suffered or incurred by the end user (including, but not limited to, general, special, consequential or incidental damages including damages for loss of business profits, business interruption, loss of business information and the like), arising from or in connection with the delivery, use or performance of the software program.

## SPECIAL PROVISIONS

This Software License Agreement and Warranty are governed by the law of the State of Washington USA.

Attachment to the License Agreement dated 16 August 1996, between Microprocessor and Memory Distribution Ltd and Soundtracs plc.

**SOUNDTRACS**

---

# Contents

<b>2.1 The Input Channels .....</b>	<b>2-2</b>
2.1.1 Channel Assignment.....	2-2
2.1.2 Worksurface Channels and Faders .....	2-3
2.1.3 Input Screen - The Standard View .....	2-4
2.1.4 The Screen - Flipping the View.....	2-5
2.1.5 Assigning a Channel.....	2-5
<b>2.2 Expanding a Processing Module .....</b>	<b>2-6</b>
2.2.1 Input Module .....	2-7
2.2.2 Equaliser Module .....	2-12
2.2.3 Dynamics Module.....	2-14
2.2.4 Pan / Aux Module.....	2-18
2.2.5 Routing Module.....	2-23
2.2.6 The ALL Button .....	2-26
2.2.7 Undo / Redo Button .....	2-26
<b>2.3 Ganging .....</b>	<b>2-27</b>
2.3.1 Creating a Gang .....	2-27
2.3.2 Clearing a Gang .....	2-27
2.3.3 How a Gang Works .....	2-28
<b>2.4 Layout .....</b>	<b>2-30</b>
2.4.1 Flip Faders.....	2-30
2.4.2 Channel Overview.....	2-30
2.4.3 Move Channels .....	2-31
<b>3.1 Busses and Outputs .....</b>	<b>3-2</b>
3.1.1 Outputs Display - the Lower Master Screen .....	3-2
3.1.2 Expanding the Buss Output View.....	3-4
<b>3.2 Output and Buss Controls .....</b>	<b>3-5</b>
3.2.1 Label.....	3-5
3.2.2 Buss Control Button .....	3-6
3.2.3 Level Trim .....	3-8
3.2.4 Limiter.....	3-8
3.2.5 Meters.....	3-8
3.2.6 Output Channel Routing .....	3-9
3.2.7 Stem Signal Order .....	3-9
3.2.8 Analogue Output Level Selection .....	3-10
3.2.9 Group & Aux Master Output Automation .....	3-10
3.2.10 Buss Signals as Input Sources .....	3-10
3.2.11 Headphones .....	3-10

---

---

<b>4.1 Master Section and Control Room .....</b>	<b>4-2</b>
4.1.1 The Master Screens.....	4-2
4.1.2 The Menu Buttons.....	4-4
<b>4.2 Configuring the Console .....</b>	<b>4-6</b>
4.2.1 Session Control .....	4-6
4.2.2 The New Session Panel .....	4-6
4.2.3 Clearing Settings .....	4-7
4.2.4 The Load Session Button .....	4-8
4.2.5 The Save as a New File Button .....	4-9
4.2.6 The Save Session Button.....	4-9
4.2.7 Saving Mix Passes .....	4-10
4.2.8 Autosave - Mix recovery .....	4-11
4.2.9 Assignment Options (Lower Screen) .....	4-12
4.2.10 The Console Split .....	4-13
4.2.11 Solo Options .....	4-14
<b>4.3 Snapshots .....</b>	<b>4-16</b>
4.3.1 Storing a Snapshot .....	4-16
4.3.2 Recalling a Snapshot.....	4-16
4.3.3 Changing a Snapshot .....	4-17
4.3.4 Moving a Snapshot .....	4-17
4.3.5 Renaming a Snapshot .....	4-17
4.3.6 Deleting a Snapshot .....	4-17
4.3.7 The Snapshot Scope Editor .....	4-18
4.3.8 Channel Scope .....	4-18
4.3.9 Controller Scope .....	4-19
4.3.10 Snapshots and MIDI .....	4-20
<b>4.4 Control Room Monitoring .....</b>	<b>4-21</b>
4.4.1 Control Room and Phones Level.....	4-21
4.4.2 Solo .....	4-21
4.4.3 Mono and Dim .....	4-22
4.4.4 ABC Output Switches .....	4-22
4.4.5 Control Room Source Buttons .....	4-22
4.4.6 The Monitor Matrix .....	4-23
4.4.7 The Master Section Meters.....	4-29
<b>4.5 Studio Monitoring - The Studio Feeds .....</b>	<b>4-30</b>

---

<b>4.6 Talkback</b> .....	<b>4-31</b>
4.6.1 Talkback Configuration Button .....	4-31
4.6.2 Talkback Mic Setup .....	4-32
4.6.3 The Talkback Mixer .....	4-32
4.6.4 Talkback Presets .....	4-33
<b>4.7 Transport Controls and Timecode</b> .....	<b>4-34</b>
4.7.1 Transport Controls & Locate Points .....	4-34
4.7.2 Master Automation Switches .....	4-36
4.7.3 Transport / Timecode Configuration Panel .....	4-36
4.7.4 Track Arming .....	4-38
<b>4.8 The Master Section Channel Controls</b> .....	<b>4-40</b>
4.8.1 Assigning the Channel Controls .....	4-40
4.8.2 Displaying the Channel Controls .....	4-40
4.8.3 Automation Controls .....	4-41
<b>4.9 Control Groups</b> .....	<b>4-42</b>
4.9.1 Adding and Removing Channels .....	4-42
4.9.2 Naming Control Groups .....	4-43
4.9.3 The Split Controls .....	4-43
4.9.4 Adjusting Control Group Channels Independently .....	4-43
4.9.5 Post Fader Option .....	4-43
<b>4.10 Audio Synchronisation</b> .....	<b>4-44</b>
4.10.1 Internal Sync - Console As Master .....	4-44
4.10.2 External Sync .....	4-44
4.10.3 Sync Outputs .....	4-46
4.10.4 Sample Rate and Conversion .....	4-46
<b>5.1 Real Time Automation</b> .....	<b>5-2</b>
5.1.2 Isolate Mode .....	5-3
5.1.3 Record Mode .....	5-3
5.1.4 Play (Update) Mode .....	5-4
5.1.5 Automation Options .....	5-4
5.1.6 Safe Mode .....	5-7
5.1.7 Offset Time .....	5-8
5.1.8 Edit Block .....	5-8
5.1.9 Trim Block .....	5-10
5.1.10 Copy Channels .....	5-12
5.1.11 Snapshot Automation .....	5-13
5.1.12 MIDI Snapshots .....	5-16
5.1.13 Control Groups and Automation .....	5-18

---

<b>5.2 The Automation Editor .....</b>	<b>5-19</b>
5.2.1 Channel Display .....	5-19
5.2.2 Scaling the Automation Editor Display .....	5-21
5.2.3 The Time-Line .....	5-21
5.2.4 Event Display .....	5-22
5.2.5 Automation Mode Buttons .....	5-25
5.2.6 Selecting and Editing Events .....	5-26
5.2.7 The Selection Tools .....	5-26
5.2.8 The Editing Tools .....	5-28
5.2.9 The Event Tools .....	5-29
<b>6.1 Inputs and Outputs .....</b>	<b>6-2</b>
6.1.1 Direct MADI Links .....	6-2
<b>6.2 Rack Units and Modules .....</b>	<b>6-3</b>
6.2.1 Rack Units .....	6-3
6.2.2 Rack Modules .....	6-3
6.2.3 Analogue Input Module .....	6-4
6.2.4 Analogue Output Module .....	6-5
6.2.5 AES/EBU Input and Output Modules .....	6-5
6.2.6 Input/Output modules .....	6-5
<b>Appendix A: Connections .....</b>	<b>A-2</b>
Analog I/O EDAC Pin Connections .....	A-3
Talkback Connections .....	A-4
<b>Appendix B: Automation Controls Listing .....</b>	<b>B-2</b>
<b>Appendix C: The Sockets File .....</b>	<b>C-2</b>
<b>Appendix D : 96KHz Operation .....</b>	<b>D-2</b>
<b>Index</b>	